


SRM Fanatec Emulator pins

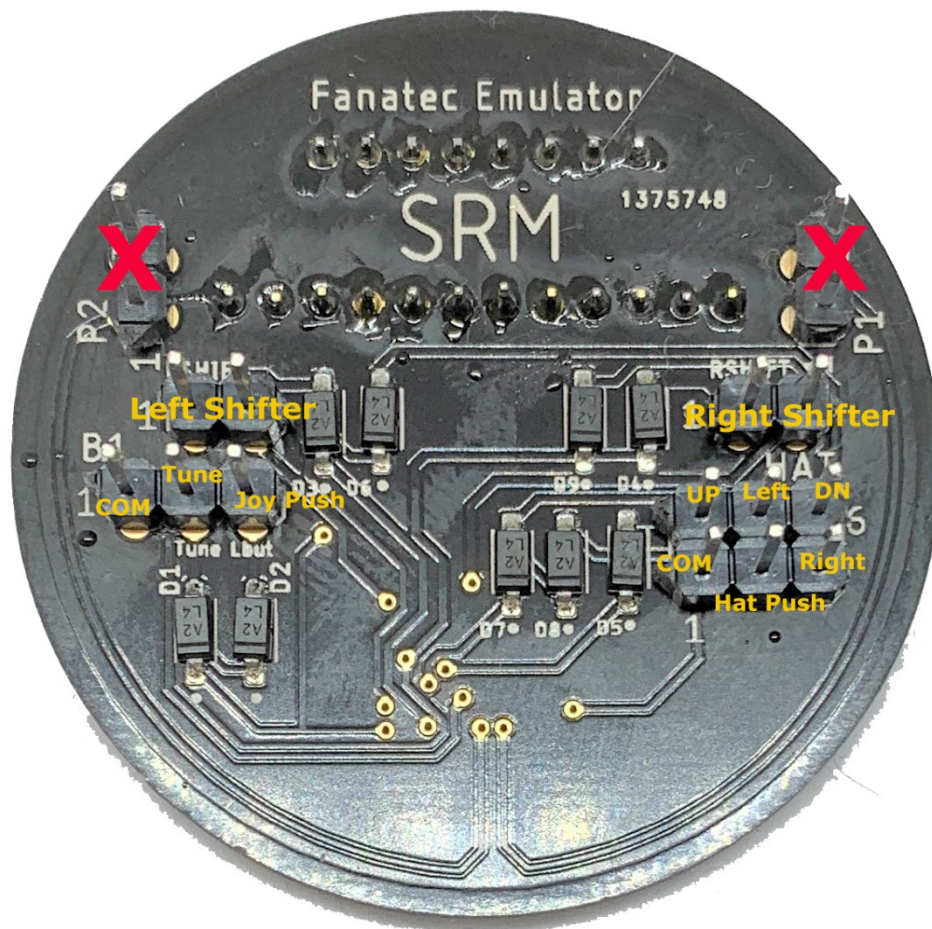

- P1 and P2 – DO NOT USE THESE
- LSHIFT – Left gear shifter
 - This is for the left gear shifter, does not matter which way wires are connected.
- RSHIFT – Right gear shifter
 - Right gear shifter, again, does not matter which way wires are connected.
- B1
 - Left is the common connection for these 2 buttons
 - Centre buttons is the tune button (the small button on the wheel by the display). Use this on the podium to enter the display menu.
 - Right is the joystick press. Use this together with the hat press to centre the wheel.
- HAT
 - This can be connected to a Hat switch. The wheel needs the press button depressed when any direction is used the fanatec software will not recognise the direction unless the press is also sent. This is the normal function of the ALPS hat switch.

You cannot share the common (COM) pins on B1, HAT or the shifters. The COM must be separate for each pin set it is not a common ground.